




Model No. 02.6209-6216-6234-6252
LED Arrow Boards
 with Control Box

Installation and Maintenance Instructions

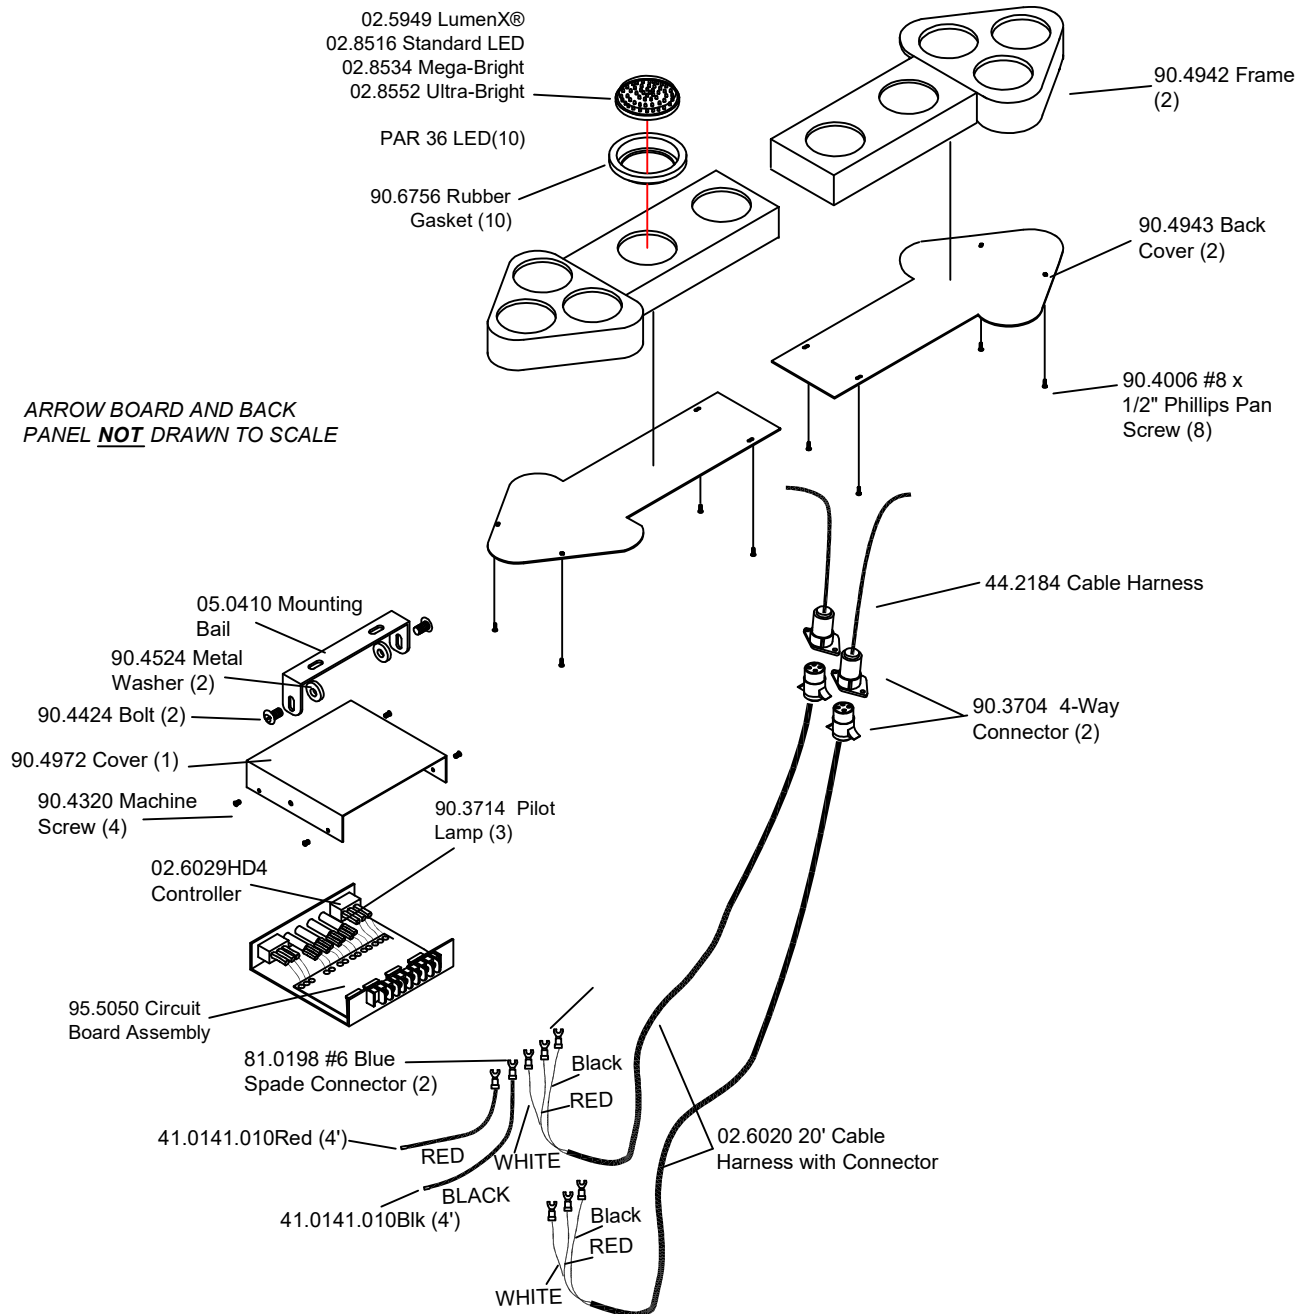

PRODUCTS COMPANY 804 East Hwy 248 Cassville, MO 65625
 U.S. and Canada Toll Free Numbers Phone: 800-641-4098 FAX: 800-526-1240
 E-mail: sales@able2products.com WEB: www.able2products.com

Installation and Maintenance Instructions

All connections are external. There is no need to open the control box during the installation process.

1. Mount the **SHO-ME**® Two Piece Arrow Board Panels on the vehicle as desired.
2. Route each cable from the Arrow Board to the drivers compartment or wherever the control box will be located.
3. A mounting bracket is provided for easy installation of the control box. Determine a suitable position for the mounting bracket and attach it to the vehicle with appropriate fasteners.
4. Connect the bare end of the **HEAVY RED** wire to a 12-volt positive power source.
5. Connect the bare end of the **HEAVY BLACK** wire to a suitable ground.
6. Connect the cable from the Arrow Board on the passenger's side of the vehicle to the quick connect terminal marked "Right".
7. Connect the cable from the Arrow Board on the Driver's side of the vehicle to quick connect terminal marked "Left".
8. Assemble the control box to the bracket.

****NOTE****

These instructions assume that the Arrow Boards are facing the rear of the vehicle. However, if the arrow boards are flashing to the left when the pilot lamps on the control box indicate that they should be flashing to the right and vice versa, then the Arrow Board Panel on the passenger side of the vehicle should be connected to the terminal marked "Left", and the Arrow Board Panel on the Driver's side should be connected to the terminal marked "Right".

After completing the installation, always check the direction that the Arrow Board Panels are flashing, and be sure that it coincides with the direction indicated by the control box pilot lamps.

MAINTENANCE INSTRUCTIONS

TROUBLE SHOOTING

1. If the **SHO-ME**® Two Piece Arrow Board is not operating properly or is not lighting to full brilliance, make sure all wire connections made during the installation process are secure and the power source is active. Take particular care in making certain that ground connections are properly made.
2. If the Arrow Board is still not working, check the internal 10 amp fuse, in the controller.



Wiring for 02.6209-6216-6234-6252 LED Arrow Boards with 02.6029HD 4 output controller

