

MODEL NO. 11.1000 Signal Stick Controller

## **GENERAL INFORMATION:**

This signal stick controller has an ON/OFF switch, Rotary Pattern Select switch, and Speed control Dial. The controller has twelve flash patterns:

- 1. Random Flash (Patterns 2-7)
- 2. Quad Flash 2-2
- 3. Quad Flash 4-4
- 4. Double Flash 2-2
- 5. Double Flash 4-4
- 6. Center 2 Outer 2

- 7. Left 4 Right 4
- 8. Center Out
- 9. Right \* w/Double Flash
- 10. Right
- 11. Left \* w/Double Flash
- 12. Left

## **INSTALLATION INSTRUCTIONS:**

Select a location suitable for installation of the signal stick controller. Take special care to be certain the controller is **Not** mounted in the deployment area of an airbag! Using the mounting bracket as a template, mark the location of the mounting holes. Drill holes at these locations to assist in starting the mounting screws provided. Mount the bracket, and then mount the controller to the bracket using the supplied screws and washers.

## WIRING INSTRUCTIONS:

Black wire to Ground, Red wire to Positive +12V and Yellow wire to switch +12V. Yellow wire activates the signal stick in a Random Flash Pattern when +12v is applied. When operating signal stick with controller, All Signal Stick functions will override the Random Flash.

