

### LED Mighty Light

# **GENERAL INFORMATION:**

The 11.3708SF Mighty Light has seven flash patterns. When it is shipped from Able 2 Products Company, the light is set on Automatic Random Select (Pattern 7). Use a remote momentary switch (not included) to select flash pattern after installation if desired. When the power is turned off then back on, the LED Mighty Light will resume the flash pattern selected before power was interrupted.

#### Flash Patterns

- 1. Double Alternating
- 2. Quad Alternating
- 3. Quint Alternating
- 4. Mega Alternating

# **INSTALLATION INSTRUCTIONS:**

- 5. Double Simultaneous
- 6. Quad Simultaneous
- 7. Automatic Random Select
- 1. Determine location where Mighty Light will be mounted. Be mindful of airbag deployment zones and other mounting hazards.
- 2. Mark holes to be drilled using the Mighty Light as a template. Drill holes and mount the Mighty Light with screws provided.
- 3. Route the wire from the Mighty Light to the remote switch (not included). Wire as shown in diagram below. *If the 3-amp fuse blows, double-check the wiring to ensure polarity has not been reversed.*

### **OPERATING INSTRUCTIONS:**

- 1. Turn the remote power switch on to activate the LED Mighty Light. If wired correctly, the Mighty Light will begin to flash.
- To change flash patterns, press and hold the momentary switch until the light stops flashing. Release the switch and the light will begin flashing in the next pattern. If not using momentary switch, touch white MODE wire to +12v momentarily to change flash patterns.

