

## **GENERAL INFORMATION:**

The LED Visor Light features two switches, **Power** - ON/OFF, and **Mode** to select the flash pattern (Map light is optional on Red Visor Lights.) When selecting a flash pattern, hold mode button until flashing stops, then release button for next flash pattern. When the power is turned off then back on, the LED Visor Light will resume the exact flash pattern as before power was interrupted.

The LED Ultra Bright Visor Light has seven flash patterns to choose from:

- 1. 90 Single FPM Simultaneous
- 2. 90 Double FPM Simultaneous
- 3. 70 Quad FPM Simultaneous
- 4. 120 Alternating FPM

- 5. Automatic Alternating Variable Speed
- 6. Automatic Simultaneous Variable Speed
- 7. Automatic Random Select

## **INSTALLATION INSTRUCTIONS:**

Select the visor you wish to use for mounting your new Visor Light. With visor in the down position mount Visor Light with attached Velcro straps. (Visor Light should be facing the front glass.) Route cord in a manner so it will not interfere with airbag deployment. Plug into lighter or accessory outlet.



