

GENERAL INFORMATION: Color of wire notes color of LED

NOTE: Must be connected to a flasher, such as 11.1005, 11.1005SF, or 11.1032. If it is connected directly to 12V (steady burn) it will over heat and void warranty.

INSTALLATION INSTRUCTIONS:

1. Determine location where Par 36 LED light will be mounted. Be mindful of airbag and other mounting hazards.

2. Flush-Mount Ring / Sun Visor Ring

Using the Flush-Mount or Sun Visor Ring as a template, mark the holes to be drilled. Drill holes, insert PAR 36 light into mounting ring. Mount light assembly using screws provided. For the Flush mount ring, position foam gasket between light assembly and mounting surface.

Rubber Recessed Ring


Using the Rubber Recessed Ring as a template, mark and drill the hole. Insert PAR 36 light into mounting ring. Carefully insert the light assembly into the hole, making sure the ring gasket fits snuggly against the mounting surface.

Round Rubber Housing - Stud Mount

Drill hole in desired location. Insert PAR 36 light into housing with wires extending through holes in rubber housing. (Mounting bracket provides ground when mounted on vehicle frame. When mounting in back window, the ground wire must be attached to the light mounting stud.) Attach housing to frame using the provided enclosed washer and locknut.

Double-Stick Adhesive Tape

Make sure the mounting surface is clean and dry. Cut adhesive tape to completely cover back of PAR 36 light. (Use several strips.) Press the tape firmly on back of light. Press light firmly on mounting surface.

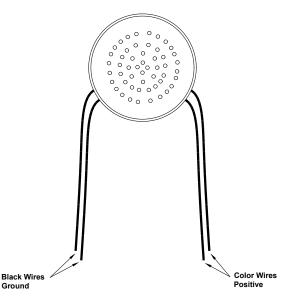



PRODUCTS COMPANY804 East Hwy 248Cassville, MO 65625U.S. and Canada Toll Free NumbersPhone: 800-641-4098 FAX: 800-526-1240E-mail: sales@able2products.comWEB: www.able2products.com