

GENERAL INFORMATION:

The **SHO-ME**[®] Luminator LED Stretch Bar is equipped with a Solid State Flasher. The flasher has 15 flash patterns including random. To change flash patterns momentarily apply +12v to the white, mode wire. Each time +12v is applied, the flash pattern will change.

FLASH PATTERNS

AltQuad Single 120 Single 240 Dual Rotate Single Rotate Fast Sequence All & Steady Single scan 2 25 ms on, 25 ms off Beacon Fade 90 FPM Alt Double On Quad On SuperMega then steady Random All Non Sequential patterns Random All Patterns

INSTALLATION INSTRUCTIONS:

Determine location to mount your Luminator LED Stretch Bar. Attach bolts to bottom of your **SHO-ME**[®] Luminator LED Stretch Bar. Keep in mind airbag deployment area and any other obstacles. Run wire inside of vehicle and connect to switch. A momentary switch is required to change flash patterns.

If mounting this product requires drilling holes, the installer MUST be sure that no vehicle components or other vital parts could be damaged by the drilling process. Check both sides of the mounting surface before drilling begins. Also de-burr any holes and remove any metal shards or remnants. Install grommets into all wire passage holes.

Use only soap and water to clean the outer lens. Use of other chemicals could result in premature lens cracking and discoloration. Lenses in this condition have significantly reduced effectiveness. Inspect and operate this product regularly to confirm its proper operation and mounting condition. **Do not use a pressure washer to clean this product**.



PRODUCTS COMPANY • 804 East Hwy. 248 • Cassville, MO 65625 U.S. and Canada Toll Free Numbers • Phone: 800-641-4098 FAX: 800-526-1240 E-mail: sales@able2products.com WEB: www.able2products.com

