




SHO-OFF®

MODEL NO. 12.1316
Permanent Mount
Dual Tier LED Mini Bar

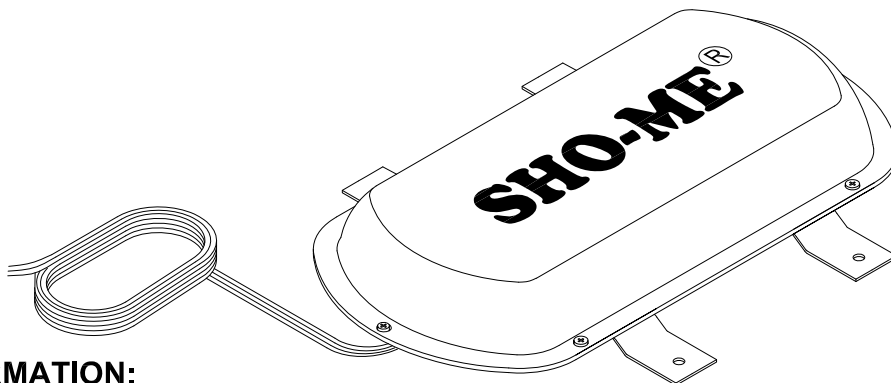

GENERAL INFORMATION:

The **SHO-ME**® LED Mini Bar is equipped with a solid state LED flasher. The LED flasher has 12 flash patterns including random. To change flash pattern press the momentary switch (Located on the bottom of the Bar). Each time the momentary switch is pressed, the flash pattern will change. To go directly to random, press the momentary mode switch for more than 5 seconds.

There is also a top tier and bottom tier, to change from top tier to bottom tier or to top/bottom tier, a 12v momentary switch (not included) is required. Each time the momentary switch is pressed, it will change from top tier to bottom tier or to top/bottom tier.

WIRING INSTRUCTIONS:

Connect the Green wire to positive +12 volts switched.

Connect the White wire to positive +12 volts momentary switched. (for tier selection)

Connect the Black wire to Ground.

FLASH PATTERNS

Quad Flash	Single Flash Fast
Chase	Fade
Scan	Crossfire
Quad Alternate	Quad Quad Single
Single Flash Slow	Double Flash
Single Flash Medium	Random

INSTALLATION INSTRUCTIONS:

Determine location to mount your LED Mini Light Bar. Do not install this product or route any wires in the deployment area of your air bag. Equipment mounted or located in the air bag deployment area will damage or reduce the effectiveness of the air bag, or become a projectile that could cause serious personal injury or death.

WARNING: The steel content of vehicle roofs varies considerably and some may not be suitable for mounting warning lights with magnetic bases. **It is the sole responsibility of the users** of magnetic based lights to determine if portable warning lights may be safely used on the exterior of vehicle.

If mounting this product requires drilling holes, the installer MUST be sure that no vehicle components or other vital parts could be damaged by the drilling process. Check both sides of the mounting surface before drilling begins. Also deburr any holes and remove any metal shards or remnants. Install grommets into all wire passage holes.

Use only soap and water to clean the outer lens. Use of other chemicals could result in premature lens cracking and discoloration. Lenses in this condition have significantly reduced effectiveness. Inspect and operate this product regularly to confirm its proper operation and mounting condition. **Do not use a pressure washer to clean this product.**



PRODUCTS COMPANY • 804 East Hwy. 248 • Cassville, MO 65625
U.S. and Canada Toll Free Numbers • Phone: 800-641-4098 FAX: 800-526-1240
E-mail: sales@able2products.com WEB: www.able2products.com