



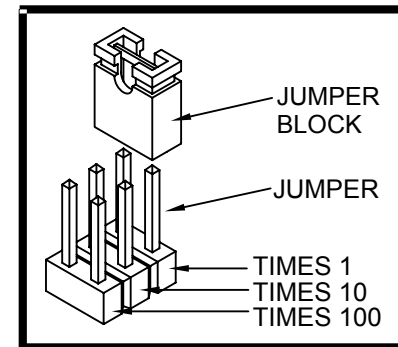

**MODEL NO. 25.3500  
DELAY TIMER**

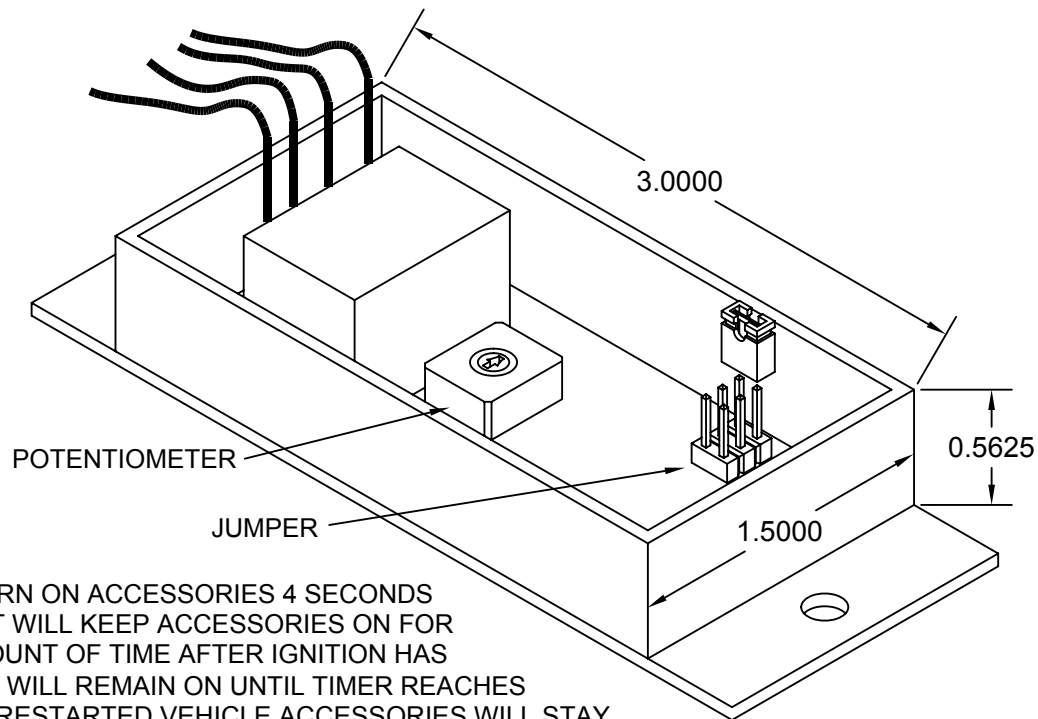

THIS DELAY TIMER IS DESIGNED TO TURN ON ACCESSORIES 4 SECONDS AFTER VEHICLE HAS BEEN STARTED. IT WILL KEEP ACCESSORIES ON FOR A PREDETERMINED (ADJUSTABLE) AMOUNT OF TIME AFTER IGNITION HAS BEEN TURNED OFF. ALL ACCESSORIES WILL REMAIN ON UNTIL TIMER REACHES THE SET TIME. EACH TIME IGNITION IS RESTARTED VEHICLE ACCESSORIES WILL STAY ON. ONLY THE INTERNAL CLOCK OF THE TIMER WILL RESET.

TO ADJUST TIME: THE POTENTIOMETER ADJUSTS FROM 2 TO 20 MINUTES. TURN SLOT COUNTER-CLOCKWISE UNTIL IT STOPS FOR 2 MIN. SETTING. TURN SLOT CLOCKWISE UNTIL IT STOPS FOR 20 MIN. SETTING. STOP ANYWHERE IN BETWEEN FOR DIFFERENT TIME SETTINGS.

THE JUMPER MULTIPLIES THE POTENTIOMETER SETTING BY MULTIPLES OF 1, 10, & 100. MINIMUM & MAXIMUM SETTINGS: (X's 1- 2 MIN. TO 20 MIN.) (X's 10- 20MIN. TO 3 HRS. & 33 MIN.) (X's 100- 3 HRS. 33 MIN. TO 33 HRS 33 MIN.)

TO SET JUMPER SIMPLY SLIDE THE JUMPER BLOCK OVER THE TWO PINS OF THE DESIRED MULTIPLE.

