

# SHO-ME®

Model No. 25.4802

## Installation Instructions for Gun-Lock Timer

### General:

The **SHO-ME® Gun Lock Timer** provides easier, safer, and quicker use of all makes of electric gun locks by making shotgun removal a one-hand operation.

The gun-lock release switch normally connected to the lock is connected to both the lock and the timer. The gun-lock and timer are activated by pressing a momentary switch (switch included). The momentary switch does **not** need to be held in the down position. Since the timer allows power to be supplied for **8 seconds**, the same hand used for operating the switch is now free to remove or help remove the shotgun.

Timer failure from overload or short-circuit **will not prevent** normal, untimed release.

Before attempting installation of the timer, install the switch in a convenient operating position and proceed with the following timer installation.

### Instructions

1. Connect the **black** timer wire to vehicle chassis ground. (-)
2. Connect the **white** timer wire to wire leading from switch to Gun-Lock.
3. Connect the **red** timer wire to the positive (+) terminal of the battery.
4. Connect the other switch terminal to the positive (=) terminal of the battery.
5. Using 12" tie-wrap secure the timer to a rigid vehicle component.

If the **Gun-Lock Timer** does not perform properly, check for proper wiring.  
*Remember:* The timer will be activated for **8 seconds**.