







MODEL NO. 20.0130 COVERT

Visor Light Cover and/or Official Identifier

INSTALLATION AND OPERATING INSTRUCTIONS:

1. Lower the visor and remove the "Visor Light". (if previously installed)
2. Separate the Velcro straps from each other and position the "COVERT" (strap equipped edge) against the lower edge of the visor with the sign pocket facing toward the windshield, or the front of the vehicle. Loop the front side Velcro straps over the top of the visor (windshield facing side).
3. Secure the "COVERT" to the visor with the rear side Velcro straps. NOTE: The Velcro straps are purposely longer than required to permit the attachment to various widths of visors. After the above installation, the excess strap material may be trimmed.
4. Slide the vehicle identifier sign into the front pocket of the "COVERT".
5. Before remounting the "Visor Light" to the visor, adhere the included 3/4"x2" loop Velcro pad to the upper edge of the "Visor Light".
6. Mount the Clip with the Velcro pads over the top center of the visor. This clip allows the "COVERT" to be stored on either side of the visor if it is used without the "Visor Light". The back side storage is to be used when on pursuit runs to prevent blind spots.
7. Remount the "Visor Light" with its lower edge (switch side) adjacent to the lower visor edge. Route the cable where it does not interfere with the visor operation. Rotate the visor to the stored position, fold the "COVERT" over the "Visor Light" and press the Velcro surfaces together.
8. Deploy the "COVERT"/"Visor Light" combination by pulling downward on the pile tab attached to the "COVERT" front edge. Activate the "Visor Light" with its switch.
9. After use, turn off the "Visor Light" and restore the "COVERT"/"Visor Light" combination as in 7 above.

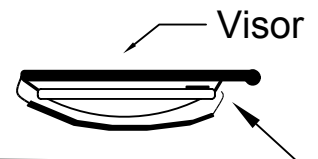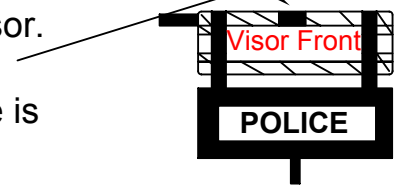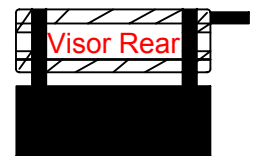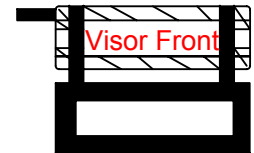

PRODUCTS COMPANY 804 East Hwy 248 Cassville, MO 65625
 U.S. and Canada Toll Free Numbers Phone: 800-641-4098 FAX: 800-526-1240
 E-mail: sales@able2products.com WEB: www.able2products.com